



YASHICA

FX-D QUARTZ

ASSEMBLING CHART

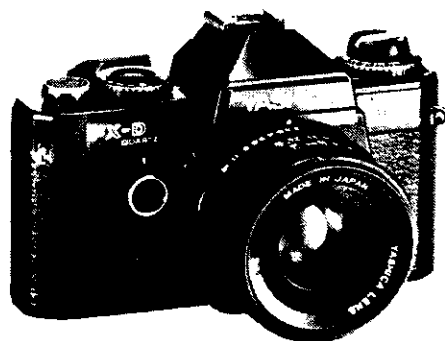


YASHICA CO., LTD.
T O K Y O J A P A N

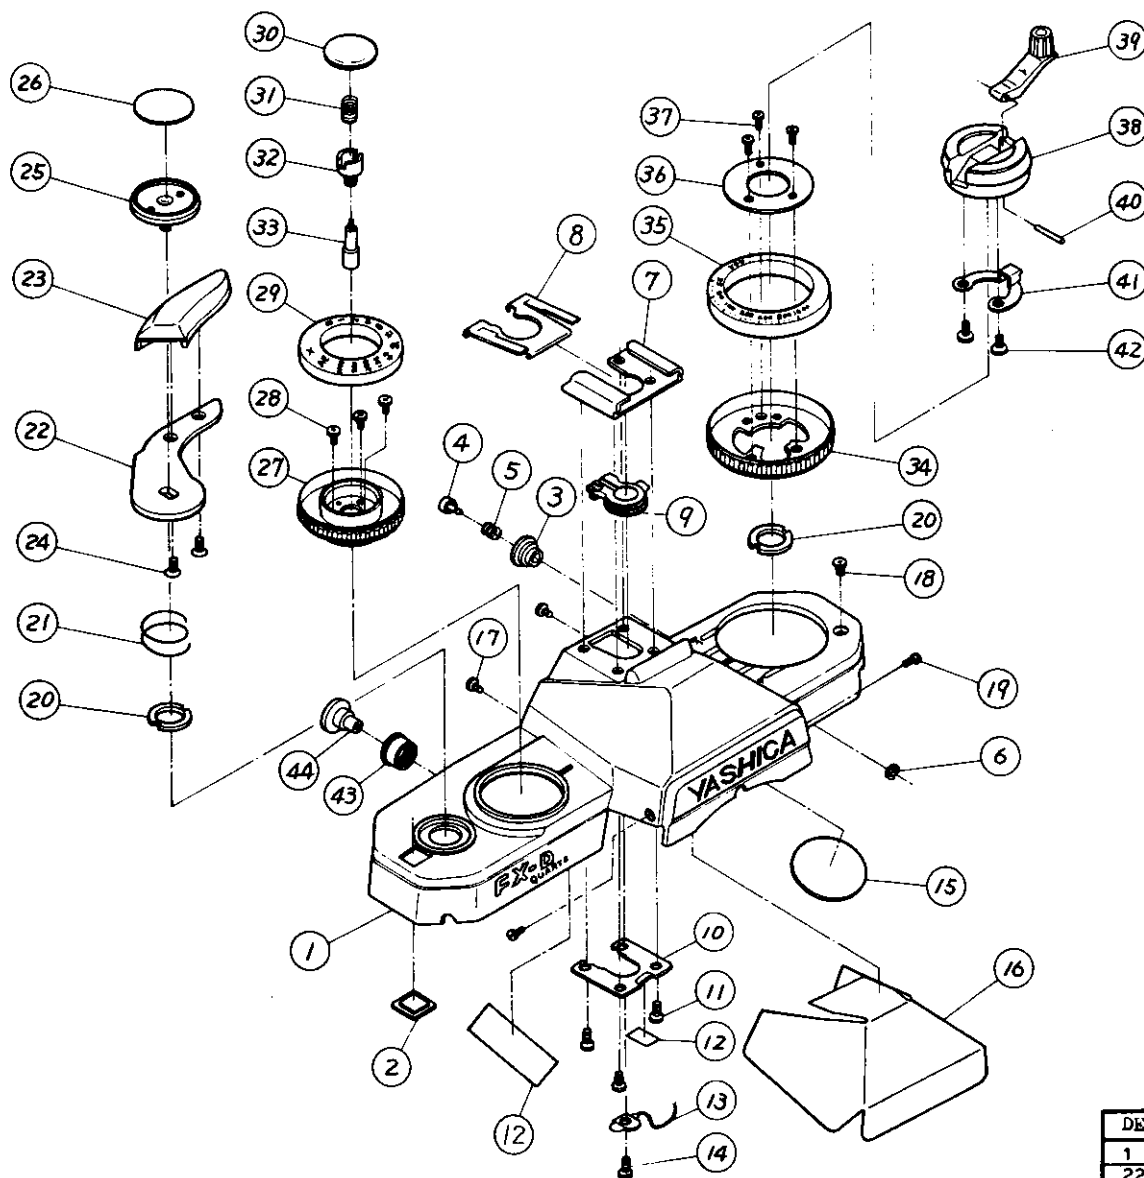

PARTS NO.	DESCRIPTION	QTY
1	★ Top Cover	1
2	152121 Counter Window	1
3	139191 S. Lock Button Holder	1
4	139161 S. Lock Button	1
5	139192 S. Lock Button Spring	1
6	66101225 E - Ring (E-12)	1
7	139169 Accessory Shoe	1
8	139178 Shoe Plate Spring	1
9	069461 Shoe Contact Ass'y	1
10	152125 Shoe Reinforcement Plate	1
11	61912822 Shoe Reinforcement Plate S.S.	3
12	- Acetate Cloth Tape	2
13	152128 Shoe Contact Plate (2) Ass'y	1
14	61914024 Shoe Contact Plate (2) Ass'y SS	1
15	152513 P.C.V.	1
16	152126 Insulation Sheet	1
17	61912529 Top Cover S.S.	2
18	61912029 " "	1
19	61903029 " "	2
20	322312 Top Cover Nut	2
21	152636 Winding Lever Spring	1
22	152630 Winding Lever	1
23	152632 Winding Lever Knob	1
24	61824022 Winding Lever Knob S.S.	2
25	152633 Winding Lever S.S.	1
26	152634 Winding Lever Leather	1
27	152402 S. Dial	1
28	61913024 S. Dial S.S.	3
29	152403 S. Dial Name Plate	1
30	139311 Release Button	1
31	139313 Release Spring	1
32	152409 Shutter Button Shaft Stopper	1
33	152408 Shutter Button Shaft	1
34	152421 ASA Dial	1
35	152422 A. Dial Name Plate	1
36	152423 A. Dial Cover	1
37	61912229 A. Dial Cover S.S.	3
38	139368 Rewind Knob	1
39	139369 Crank Arm Ass'y	1
40	66670830 Crank Arm Pin	1
41	139373 Crank Arm Spring	1
42	69112554 Crank Arm Spring S.S.	2


DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
1 - 16	069160	Top Cover Ass'y
22 - 24	069661	Winding Lever Ass'y
38 - 42	065920	Rewind Knob Ass'y

NOTE: (Parts with marked "★" are not available.)

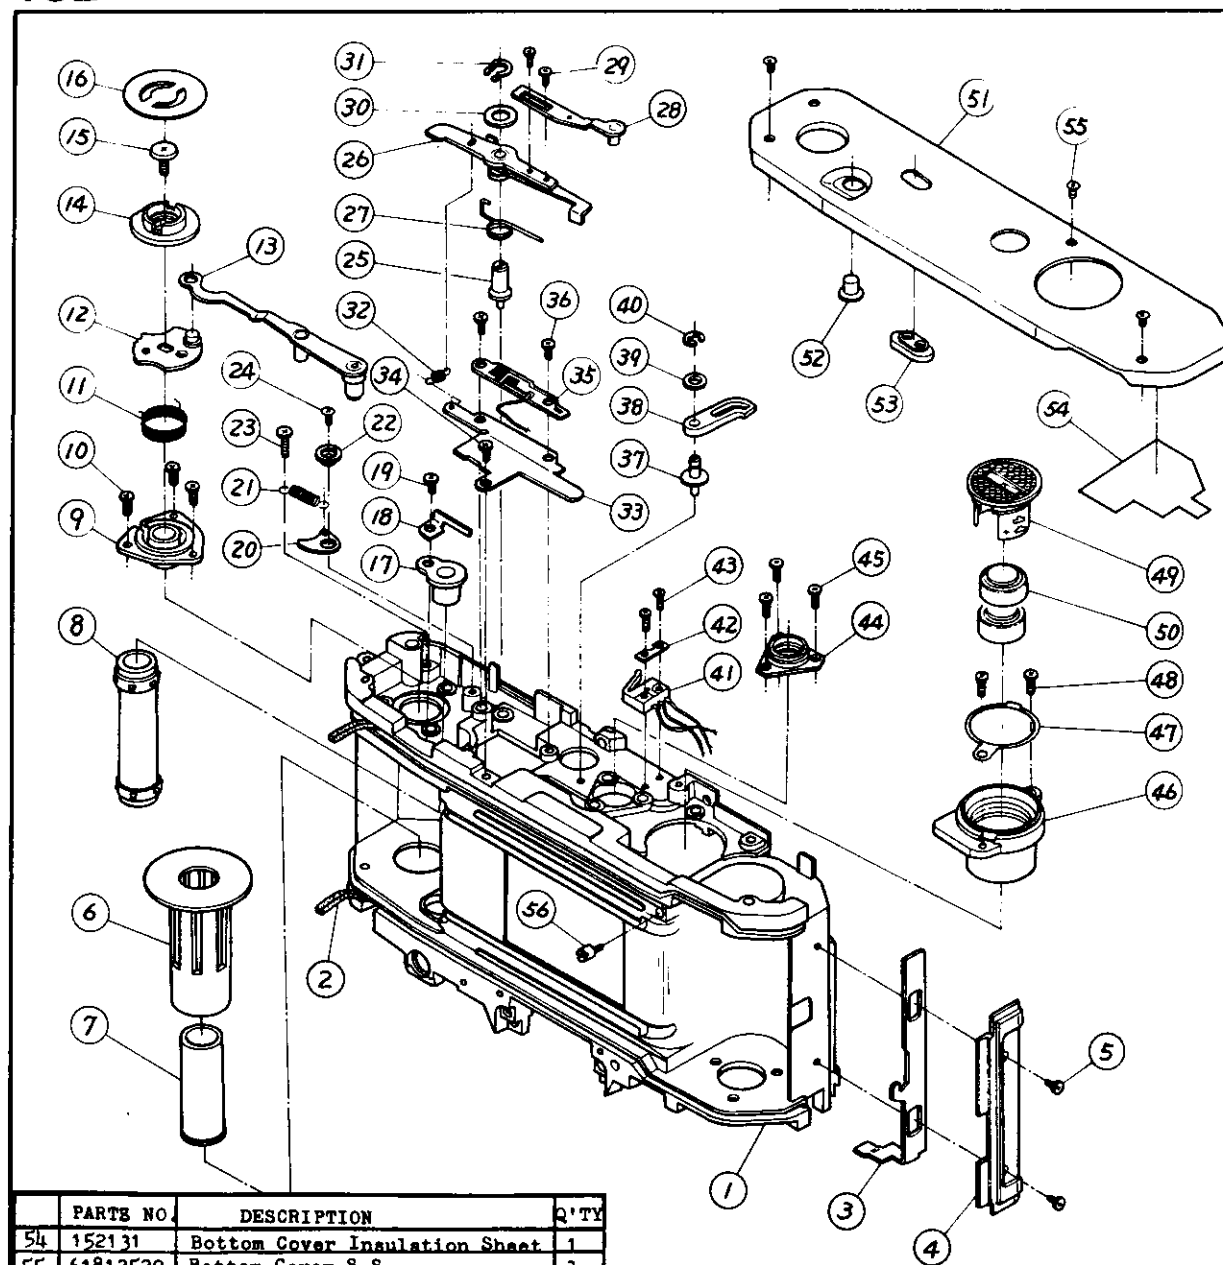

PARTS NO.	DESCRIPTION	Q'TY
1	★ Body	1
2	147153 Body Light-Proof Moquette	2
3	152102 Back Cover Lock Plate	1
4	152103 Lock Plate Cover	1
5	61913024 Lock Plate Cover S.S.	2
6	139641 Outside Spool	1
7	305658 Inside Spool	1
8	139648 Sprocket	1
9	147631 Winding Holder	1
10	63913024 Winding Holder S.S.	3
11	152622 Winding Spring	1
12	066617 Set Cam Plate Ass'y	1
13	066717 SM. Set Lever Ass'y	1
14	152621 MD. Cap Ring	1
15	66001037 MD. Cap Ring S.S.	1
16	139680 MD. Light-Proof Plate	1
17	139646 Sprocket Metal	1
18	147630 Sprocket Reverse Spring	1
19	63912524 Sprocket Reverse Spring S.S.	1
20	147638 Anti-Rewind Claw	1
21	147636 Anti-Rewind Claw Spring	1
22	147637 Anti-Rewind Collar	1
23	61915524 Anti-Rewind Claw Spring S.S.	1
24	61814024 Anti-Rewind Collar S.S.	1
25	139690 W. Obstruction Lever Shaft	1
26	065716 W. Obstruction Lever Ass'y	1
27	139691 W. Obstruction Spring (B)	1
28	065436 TF. SW. Lever (A) Ass'y	1
29	63901524 TF. SW. Lever (A) Ass'y S.S.	2
30	60332621 Washer	1
31	66172525 Snap Ring (GS- 2,5)	1
32	139688 W. Obstruction Spring (A)	1
33	139692 SM. Set Lever Fixer	1
34	61913024 SM. Set Lever Fixer S.S.	1
35	139697 Connector Base	1
36	61913024 Connector Base S.S.	2
37	139695 TF. SW. Shaft	1
38	139670 TF. SW. Lever (B)	1
39	60122610 Washer	1
40	66101525 E - Ring (E - 15)	1
41	139664 TF. SW.	1
42	139652 TF. SW. Fixer	1
43	63904024 TF. SW. Fixer S.S.	2
44	139144 Tripod Socket	1
45	61924022 Tripod Socket S.S.	3
46	069110 Battery Case Ass'y	1
47	139154 Battery Case Contact (B)	1
48	61914522 Battery Case S.S.	2
49	065930 Battery Cap Ass'y	1
50	★ Battery	2
51	152130 Bottom Cover	1
52	139651 Sprocket Button	1
53	139194 Connector Frame	1


NOTE : (Parts with marked "★" are not Available)

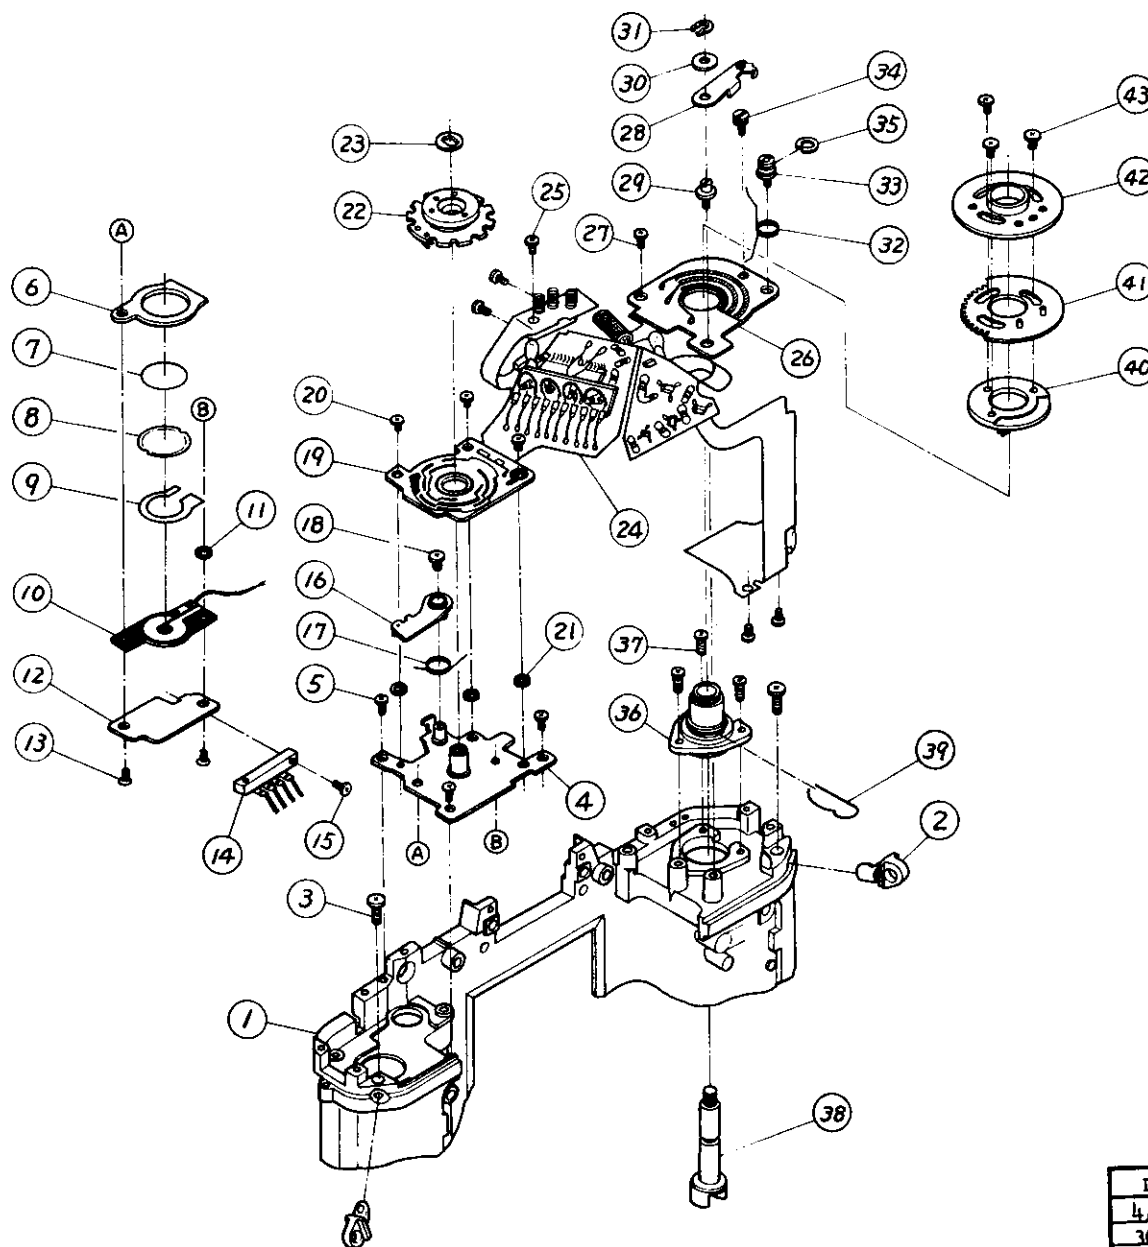

PARTS NO.	DESCRIPTION	Q'TY
1	★ Body	1
2	152104 Strap Holder	2
3	69226054 Strap Holder S.S.	2
4	152401-A S. Base Plate Sub Ass'y	1
5	61912522 S. Base Plate Ass'y S.S.	3
6	152417 R. Base Holder	1
7	131814 Check Insulation Sheet	1
8	152520 PS. SW.	1
9	152416 Release Base Washer	1
10	152506 Release Base	1
11	60301812 Washer	1
12	152418 Release Base Fixer	1
13	61813022 Release Base Fixer S.S.	2
14	139339 Combination Connector	1
15	63903024 Combination Connector S.S.	1
16	069301 S. Click Lever Ass'y	1
17	152414 S. Click Spring	1
18	66001033 S. Click Lever Ass'y S.S.	1
19	152504 S. Base	1
20	61912522 S. Base S.S.	3
21	60151812 Washer	3
22	069442 S. Dial Shaft Ass'y	1
23	152407 S. Dial Shaft Stopper	1
24	069503 Amp.	1
25	61912522 Amp. S.S.	5
26	152505 ASA Base	1
27	61912522 ASA Base S.S.	1
28	069428 A. Lock Lever Ass'y	1
29	152430 A. Lock Lever Shaft	1
30	60322110 Washer	1
31	66172025 E - Ring (GS - 2)	1
32	152431 A. Lock Spring	1
33	152432 A. Lock Spring Shaft	1
34	152433 A. Lock Spring Post	1
35	66150325 E - Ring (CE - 3)	1
36	152640 Rewind Shaft Holder	1
37	63924524 Rewind Shaft Holder S.S.	3
38	139342 Rewind Shaft	1
39	139343 Rewind Shaft Spring	1
40	152436-7 A. Contact Holder Ass'y	1
41	152426-7 A. Click Plate Ass'y	1
42	152424 A. Dial Shaft	1
43	63912824 A. Dial Shaft S.S.	3

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
4, 6 - 13	069445	S. Base Plate Ass'y
36, 38, 39	069610	Rewind Shaft Ass'y


NOTE: (Parts marked "★" are not Available)

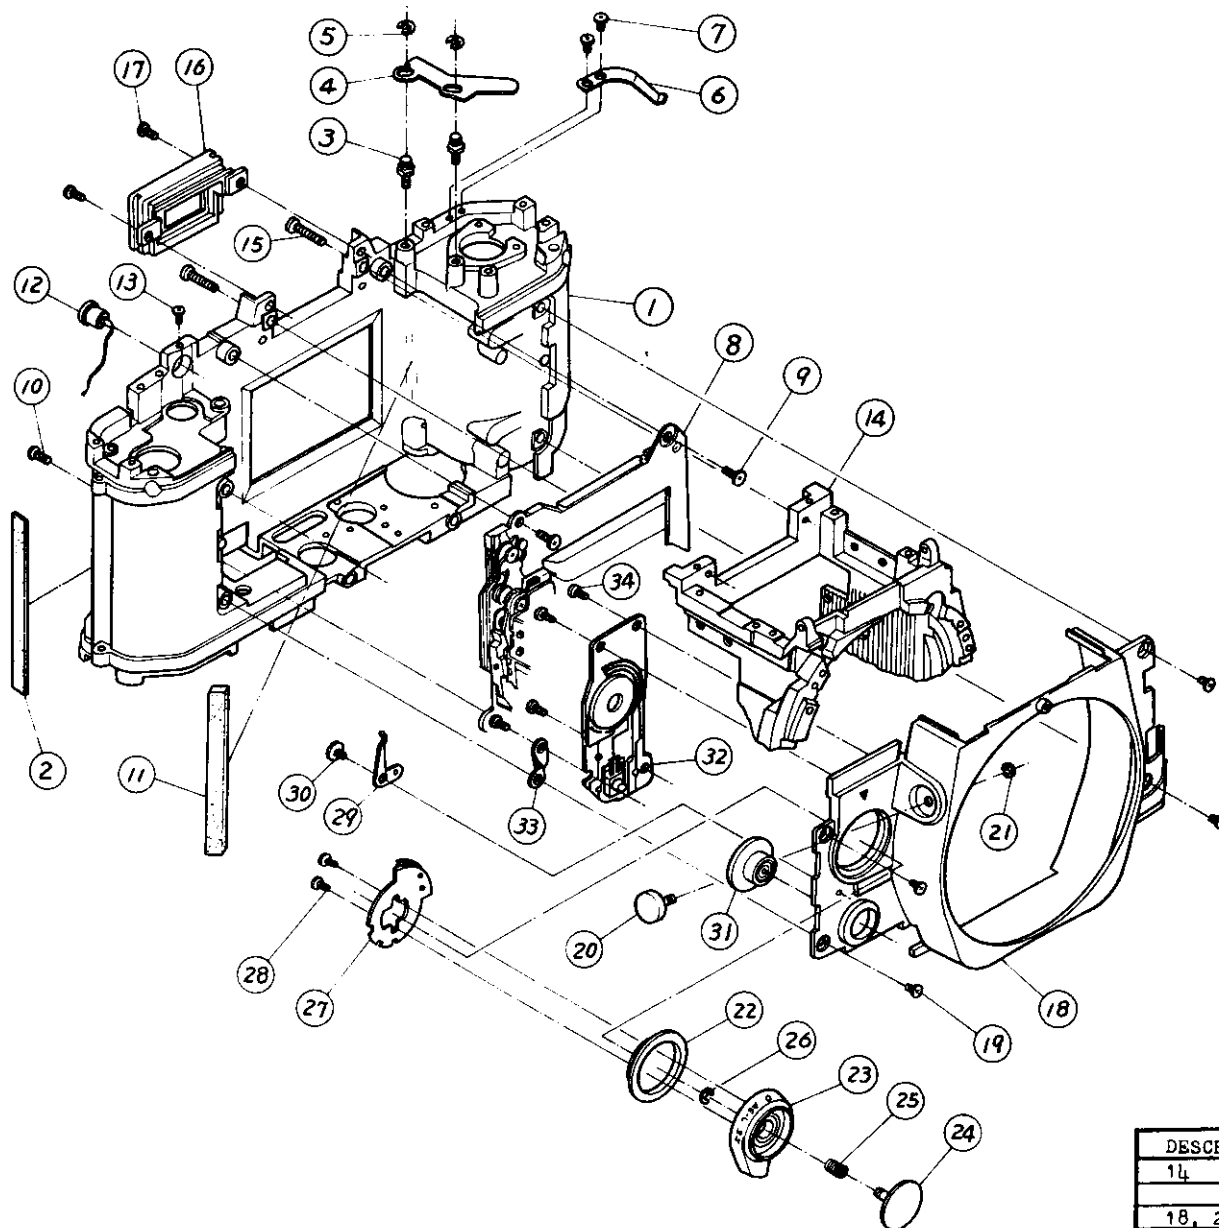

	PARTS NO	DESCRIPTION	Q'TY
1	★	Body	1
2	152116	Body Hinge Moquette	1
3	152435	A. Reverse Lever Shaft	2
4	152434	A. Reverse Lever	1
5	66101525	E. Hing (E - 15)	2
6	147142	Lock Plate Spring	1
7	61912224	Lock Plate Spring S.S.	2
8	139201	Complete Shutter	1
9	61824522	Shutter S.S.	2
10	61924022	"	1
11	147206	Shutter Light-Proof Moquette	1
12	065462	R. Socket Ass'y	1
13	61812521	R. Socket Ass'y S.S.	1
14	★	Mirror Box	1
15	61927024	Mirror Box S.S.	2
16	139168	Eye-Piece Frame	1
17	61913524	Eye-Piece Frame S.S.	2
18	152801-A	Mount Cover Sub Ass'y	1
19	63912224	Mount Cover S.S.	4
20	147803	Set Off Button	1
21	66101225	E - Ring (E - 12)	1
22	★	EL. Lever Holder	1
23	152205-A	EL. Lever Ass'y	1
24	139209	EC. Button	1
25	139210	EC. Button Spring	1
26	66101225	E - Ring (E - 12)	1
27	152208-9	EL. Rotation Plate Ass'y	1
28	61913024	EL Rotation Plate Ass'y S.S.	2
29	152210	EL. Click Spring	1
30	66001041	EL. Click Spring S.S.	1
31	152212	Self Window	1
32	152507-A	EC. Base Ass'y	1
33	152213	Earth Plate	1
34	69112554	EC. Base Ass'y S.S.	4

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
14	069750	Mirror Box Ass'y
		See! Page No. 6, 7, 8
18, 20-34	069801	Mount Cover Ass'y


NOTE: (Parts with marked "★" are not available.)

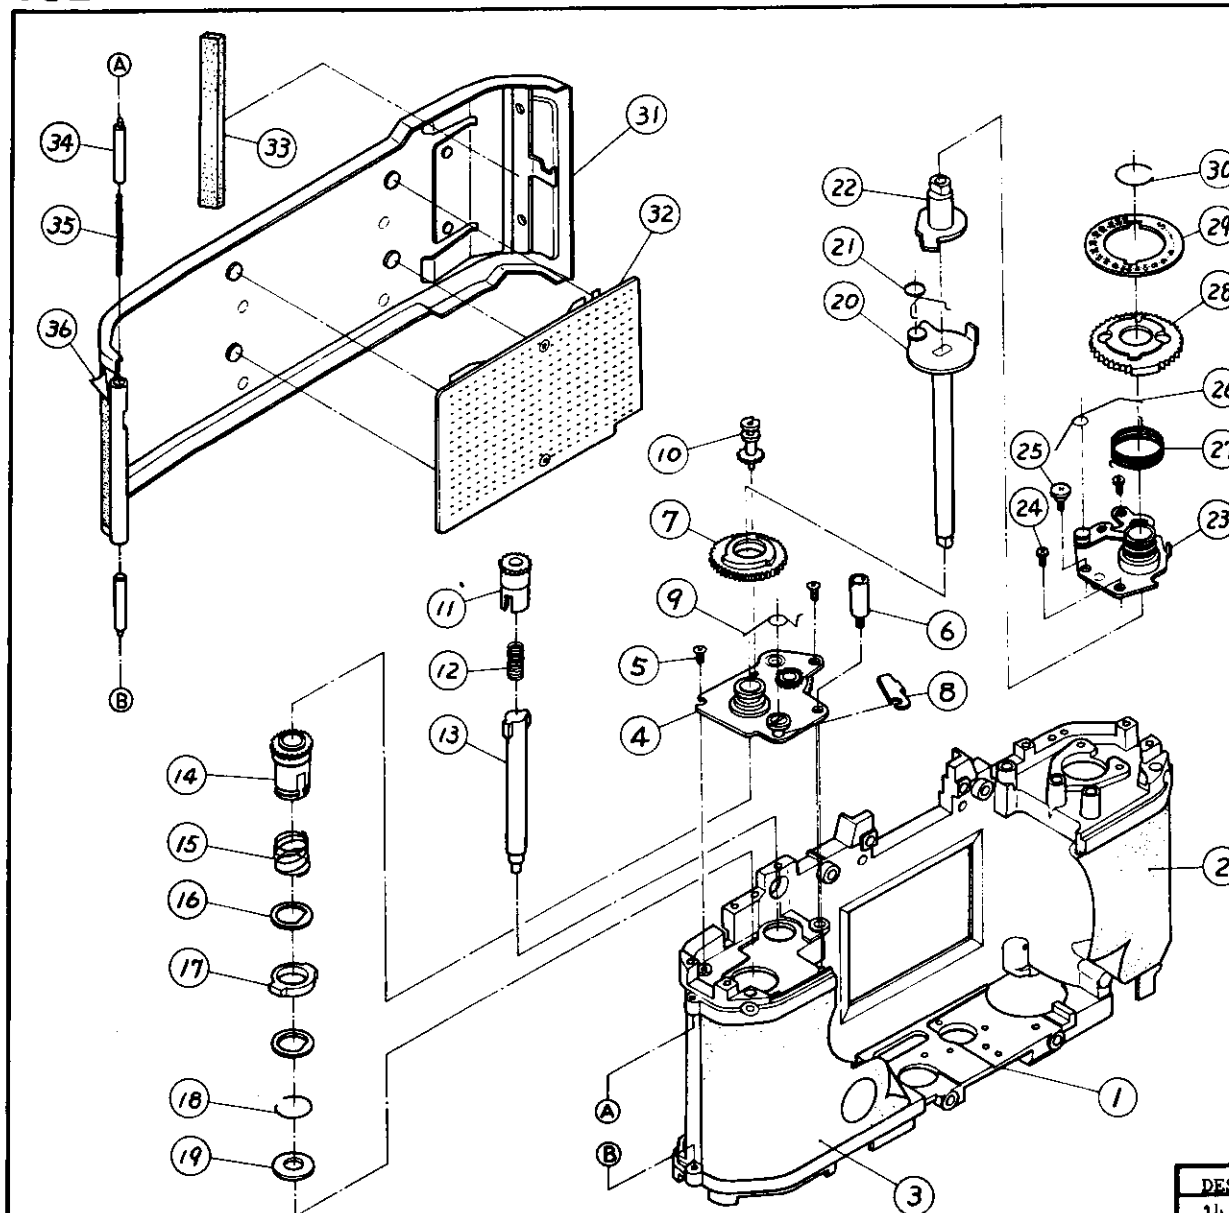

	PARTS NO	DESCRIPTION	Q'TY
1	★	Body	1
2	152114	Front Leather (Right)	1
3	152115	Front Leather (Left)	1
4	069200	W. Base Plate Ass'y	1
5	61813524	W. Base Plate Ass'y S.S.	2
6	152610	S. Base Plate Post	1
7	147603	A. Gear	1
8	147611	A. Gear Stopper	1
9	147619	A. Gear Stopper Spring	1
10	147863	Counter Gear - 1	1
11	139644	Sprocket Gear	1
12	139650	Sprocket Spring	1
13	139647	Sprocket Shaft	1
14	147616	Spool Gear	1
15	147640	Friction Washer	1
16	139640	Friction Washer	2
17	139639	Friction Plate	1
18	147642	Spring Cover Stopper	1
19	60284110	Washer	1
20	069641-A	Winding Shaft Ass'y	1
21	147625	Ratchet Claw Spring	1
22	069645	Winding Lever Shaft Ass'y	1
23	★	Counter Base Plate Ass'y	1
24	61913024	Counter Base Plate Ass'y S.S.	2
25	147816	Lock Lever Shaft	1
26	152870	Counter Reverse Lever Spring	1
27	139890	Counter Spring	1
28	139888	Counter Gear - 2	1
29	152864	Counter Name Plate	1
30	139891	Counter Gear Stopper	1
31	★	Back Cover Ass'y	1
32	066287	Pressure Plate Ass'y	1
33	132108	Back Cover Lock Moquette	1
34	152106	Hinge Shaft	2
35	131133	Hinge Shaft Spring	1
36	152109	Back Cover Leather	1

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
14 - 19	066601	Spool Gear Ass'y
23, 26 - 30	069830	Counter Base Plate Ass'y
31, 33, 36	069103	Back Cover Ass'y


NOTE: (Parts with marked "★" are not available.)

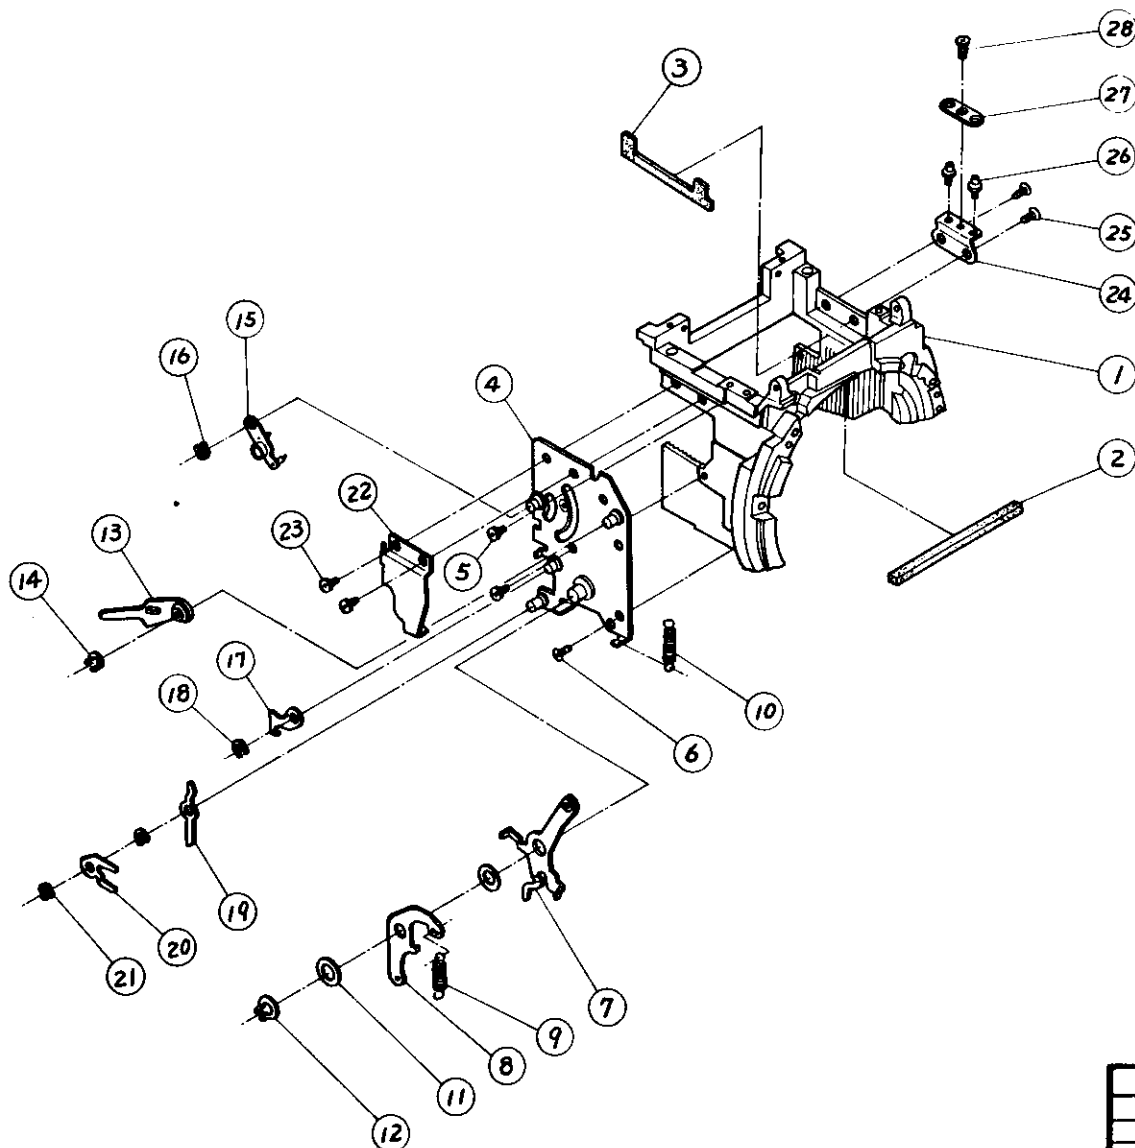

	PARTS NO.	DESCRIPTION	Q'TY
1	★	Mirror Box	1
2	139787	Mirror Cushion } (Select)	1
-	147787	" "	-
3	139859	M. Moquette	1
4	139753-A	MC. Base Plate Sub Ass'y	1
5	152782	MC. Base Plate S.S.	2
6	152781	" "	1
7	065212	MCL - 2 Ass'y	1
8	065297	MCL - 1 Ass'y	1
9	139760	MC. Driving Spring	1
10	139761	MC. Restore Spring	1
11	60223122	MCL - 1 Washer	2
12	66173025	Snap Ring (GS - 3)	1
13	065213	MCL - 3 Ass'y	1
14	66172025	Snap Ring (GS - 2)	1
15	065214	MCL - 4 Ass'y	1
16	66172025	Snap Ring (GS-2)	1
17	139770	MCL - 5	1
18	66172025	Snap Ring (GS-2)	1
19	139771	MCL - 6	1
20	139772	MCL - 7	1
21	66172025	Snap Ring (GS-2)	2
22	139773	MC. Light-Proof Plate	1
23	63901524	MC. Light-Proof Plate S.S.	2
24	139875	S-LED Adjusting Plate - 1	1
25	61812524	S-LED Adjusting Plate - 1, S.S.	2
26	139879	S-LED Adjusting Screw	2
27	139877	S-LED Adjusting Plate - 2	1
28	61914522	S-LED Adjusting Plate - 2, S.S.	1

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
1 - 21	069750	Mirror Box Ass'y
		(See Page No. 4, 7, 8)
4, 7-14, 17-21	069195	MC. Base Plate Ass'y


NOTE: (Parts with marked "★" are not available.)

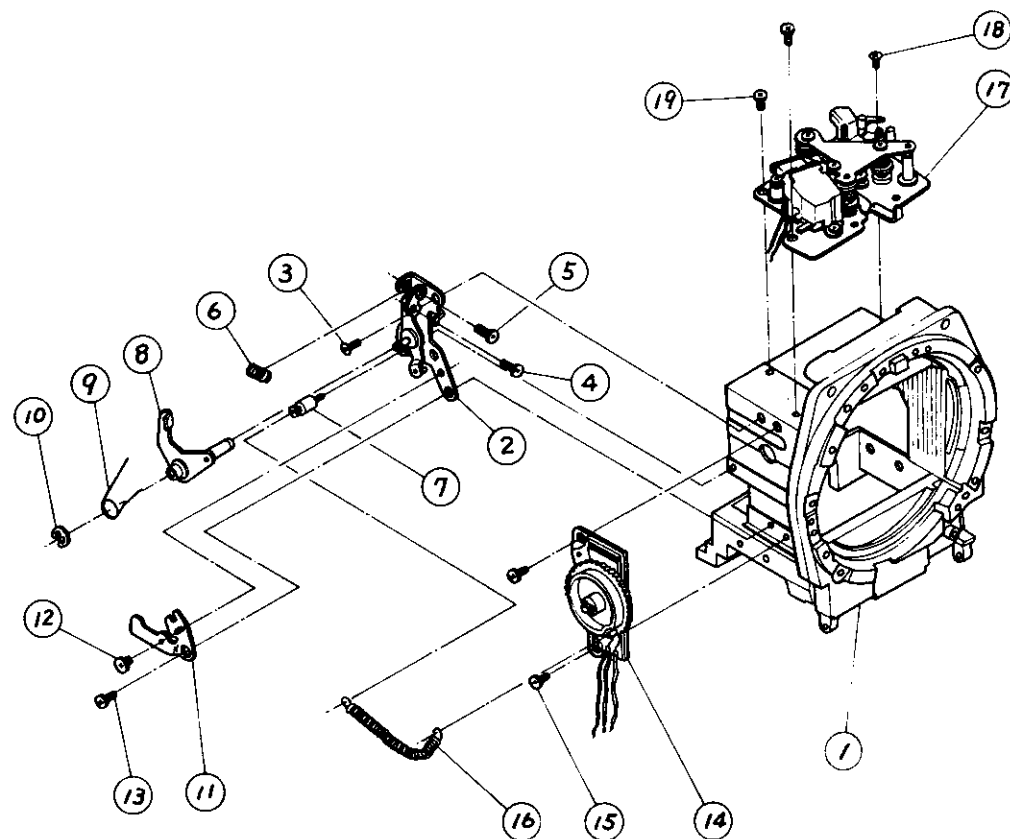

PARTS NO	DESCRIPTION	Q'TY
1	Mirror Box	1
2	069250 ML. Base Plate Ass'y	1
3	152781 ML. Base Plate Ass'y S.S.	1
4	63913024 " " "	1
5	63914022 " " "	1
6	139833 ML. Base Plate Spring	1
7	147831 Aperture Resister Spring Post	1
8	065255 ML - 5 Ass'y	1
9	139808 ML - 4, 5 Spring	1
10	66101525 E- Ring (E-15)	1
11	065256 ML - 6 Ass'y	1
12	63911524 ML - 6 Ass'y S.S.	1
13	139834 " " "	1
14	069637 AVR Ass'y	1
15	152782 AVR Ass'y S.S.	2
16	147830 Aperture Resister Spring	1
17	069197 QR Base Plate Ass'y	1
18	152781 QR Base Plate Ass'y S.S.	1
19	152782 " " "	2

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
1 - 19	069-750	Mirror Box Ass'y
		(See! Page No. 4,6,8)

NOTE : (Parts marked "★" are not Available)

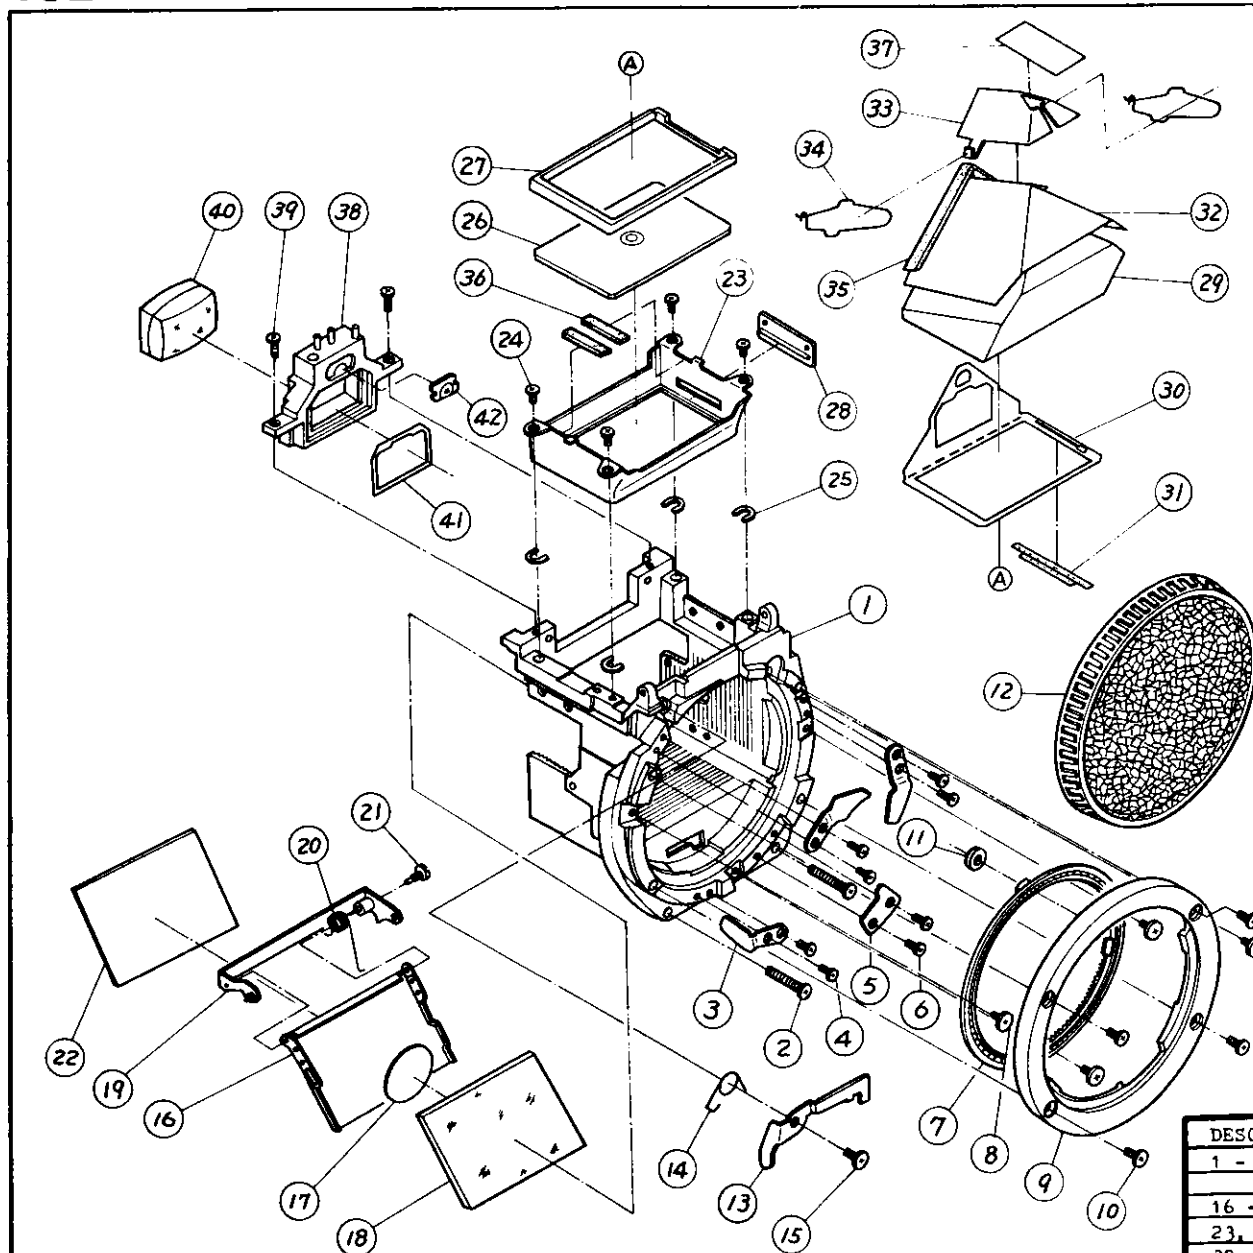

PARTS NO.	DESCRIPTION	Q'T
1	★ Mirror Box	1
2	132143 Strap Holder S.S.	2
3	139812 Mount Spring	3
4	61913024 Mount Spring S.S.	6
5	139813 Mount Stopper	1
6	61913024 Mount Stopper S.S.	2
7	139823 F. Stop Connecting Ring	1
8	666C1041 F. Stop Connecting Ring S.S.	4
9	147821 Body Mount	1
10	131177 Body Mount S.S.	4
11	147822 Lock Lever Washer	1
12	128118 Body Cap	1
13	139815 Lock Lever	1
14	147817 Lock Lever Spring	1
15	147816 Lock Lever Shaft	1
16	065741 M. Frame Sub Ass'y	1
17	139774 Mirror Adhesive Tape	1
18	147791 Mirror	1
19	065253 ML -3 Ass'y	1
20	139798 M. Spring	1
21	139706 M. Pin - 2	1
22	139799 M. Frame Light-Proof Sheet	1
23	139864 Penta Prism Holder	1
24	63913024 Penta Prism Holder S.S.	4
25	139871 P. Adjusting Washer(t 0.5)	-
-	139872 " " (t 0.2)lect	4
-	139873 " " (t 0.3)	-
26	152866 Focusing Glass	1
27	139870 Penta Spacer	1
28	139865 S. Prism	1
29	152860 Penta Prism	1
30	139868 Finder Mask Frame	1
31	139869 S. Name Plate	1
32	139861 Penta Cover	1
33	139862 Penta Prism Fixer	1
34	139863 Penta Prism Fixer Spring	2
35	139858 Penta Dust-Proof Moquette	1
36	131710 Mirror Cushion	2
37	- Acetate Cloth Tape	1
38	139873 SPD Holder - 3	1
39	63904024 SPD Holder S.S.	2
40	139878 Eye-Piece Lens	1
41	139882 Eye-Piece Mask	1
42	142-819 Light-Gathering Lens	1

DESCRIPTION	ORDER NO	ASSEMBLY PARTS
1 - 11, 13 - 22	069750	Mirror Box Ass'y
		(See Page No. 4, 6, 7)
16 - 22	066741	M. Frame Ass'y
23, 26 - 37	069815	Penta Prism Holder Ass'y
30, 31	065856	Finder Mask Frame Ass'y
38, 40 - 42	065662	SPD Holder Ass'y

NOTE : (Parts marked "★" are not Available)